

WWP R071 - M7B2 Priest in Detail (książka)**R 071 M7B2 Priest**

A Restoration Masterpiece at the Artillery Museum Brasschaat
 WWP
 PHOTO MANUAL FOR MODELERS

Cena :**104,00 PLN****89,00 PLN**Producent : **WWP (Czech)**Dostępność : **Jest**Stan magazynowy : **niski**Średnia ocena : **brak recenzji****WWP R071 - M7B2 Priest in Detail (książka)****Fotograficzna instrukcja dla modelarzy.**

Seria "Special Museum Line". Fotoalbum ze zdjęciami.

Książka zawiera 82 strony w kolorze. 250 zdjęć kolorowych.

Wydrukowano na błyszczącym papierze, format 240x225mm, miękka oprawa. Tekst angielski.

Wydawca: **WWP Wings & Wheels Publications** (Czechy)**Polecamy modelarzom i wszystkim, którzy interesują się historią wojskowości!****R 071****M7B2 Priest**

Jan Horák, František Kořán, Michel van Loon

**A Restoration Masterpiece at the Artillery Museum Brasschaat**

WWP
 WINGS & WHEELS
 PUBLICATIONS

PHOTO MANUAL FOR MODELERS®





038 M752 Hull Exterior Details



Pulpit Details 033

Pulpit Details

WWW.JADARHOBBY.PL



Hull Restoration

M752 Hull Restoration 037



Engine Restoration



042 VR Engine Restoration



M788 Description
M788 Interior Details



Driver's Compartment Details

Shown is the base model without any painting and before it is even fully built. The instrument panel and driver's seat. Above the driver's seat is a set for the right-hand compartment.



WWW.JADARHOBBY.PL Model Restoration



M788 Interior Details

Gun Compartment



Ammunition bins are on both sides of the fighting compartment. The double gun doors are built on the sides of the hull. On the side of the hull are hatches for the



060 Gun Compartment Left Side Details



Floor Details

The base of the hull is covered with a metal plate. Some parts are made of plastic. The floor is also covered with a metal plate.



058 Floor/underfloor Details

M7700 Tractor Details



Upper Carriage Details

The upper carriage is located in the lower center of the tractor. It is a cast metal part that is attached to the tractor's frame. It is used to hold the gun in place and to allow it to rotate.



072 Gun Upper Carriage Details

WWW.JADARHOBBY.PL



Gun Breech Details

The gun breech is the part of the gun that is used to load the rounds. It is a cast metal part that is attached to the gun's frame. It is used to hold the rounds in place and to allow them to be fired.



067 Gun Breech Details

Suspension Details



089 Sprocket Wheel Details

After each of the 12 links are spaced and fixed (20mm shaft after assembly), all is brought under tension. A 1/2" is now installed on the chains.

Bogie Truck Details



The bogie truck is the part of the tractor that is used to support the tracks. It is a cast metal part that is attached to the tractor's frame. It is used to hold the tracks in place and to allow them to move over the ground.



077 Bogie Truck Details

Suspension Details